




23 Morgan Street Cannington WA 6107
 Phone: 08 9458 2646 Fax: 08 9356 2082
 Contact: Shane Whiting 0412 132 139

Staircase Installation Instructions

- Start from the top – down position with the top wall stringer placed on the ground;
- Put the top 2-3 treads and the bottom 2-3 treads in the stringer, one at a time ensuring you glue and wedge in with a hammer to make it easier when you pick up the staircase and place into position;
- Position the top riser allowing for the top outstep nosing, which is installed last of all;

Note: Stringer hook may need to be packed up to upper floor finish etc (tile, carpet and timber flooring)

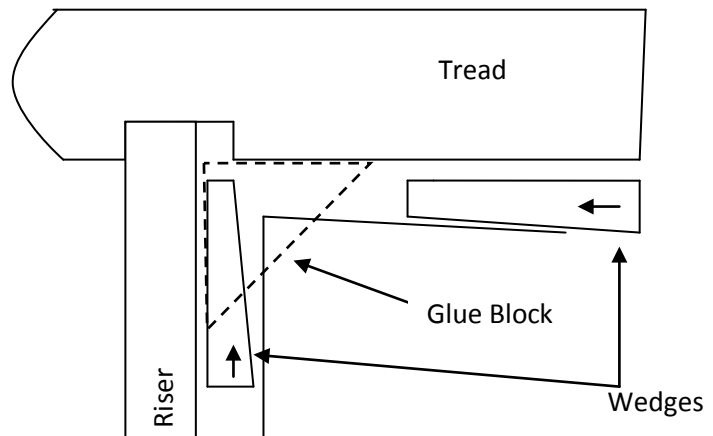


- Hit the riser up into tread then wedge and teck screw into back of tread. Ensure you have pre-drilled the riser first;
- Stand into position allowing for top floor finishing;
- Prop up so treads are all level, position central post – plumb and square to stringer;
- Assemble bottom flight (checking it fits – the right width) and place into position levelling; and
- Provided it all looks correct and is level – fix off to all walls (ensure sufficient fixing have been provided).



23 Morgan Street Cannington WA 6107
Phone: 08 9458 2646 Fax: 08 9356 2082
Contact: Shane Whiting 0412 132 139

Three Winder Set Up

- Start at the bottom winder and work up;
- Measure the width between the housing of the stringer to housing of the post, cut winder to suit.
- Mark front of riser on winder, cut and plane for a good join; and
- Wedge winder holding firmly in place, measure risers and cut and fix in as you go.

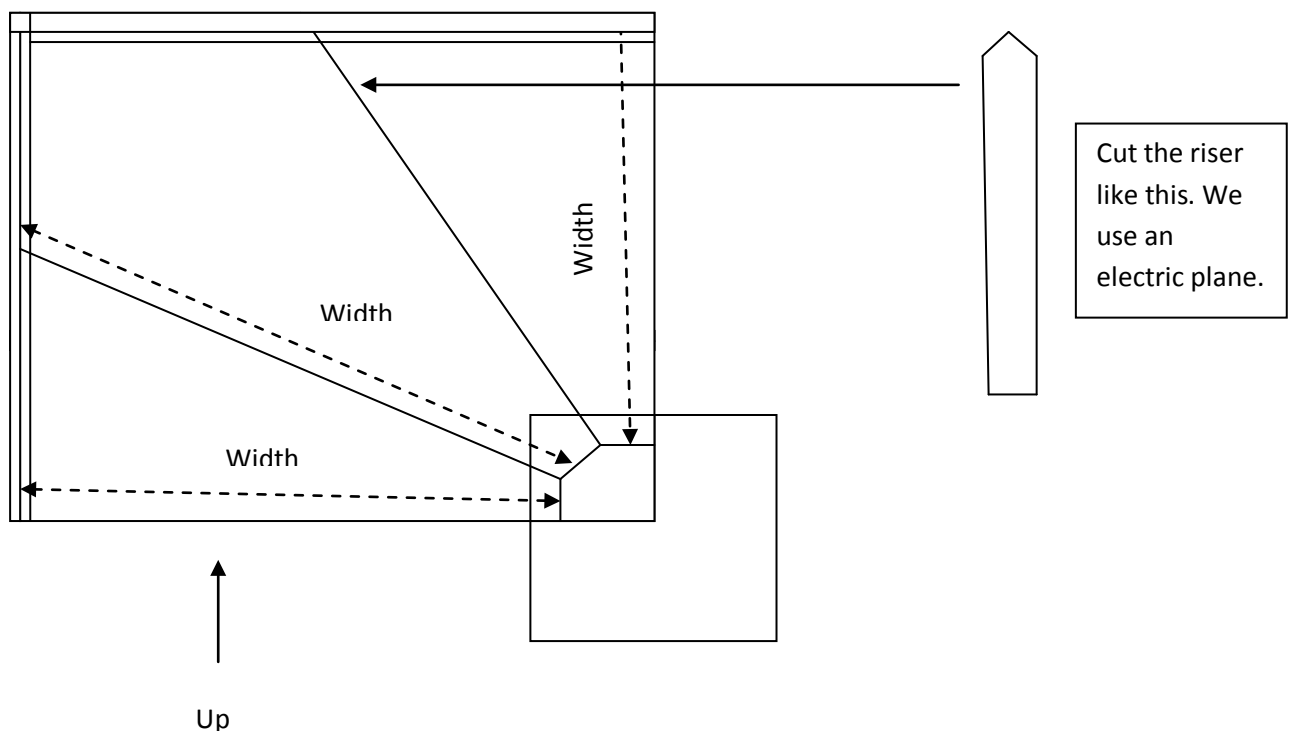




23 Morgan Street Cannington WA 6107
Phone: 08 9458 2646 Fax: 08 9356 2082
Contact: Shane Whiting 0412 132 139

Two Winder Set Up

- Once the winders are positioned (which can be difficult) mark the riser on the winder and cut or plane for a good butt join; and
- Complete both winders and all riser including landing and nosing. Hint: Start with the lower riser.

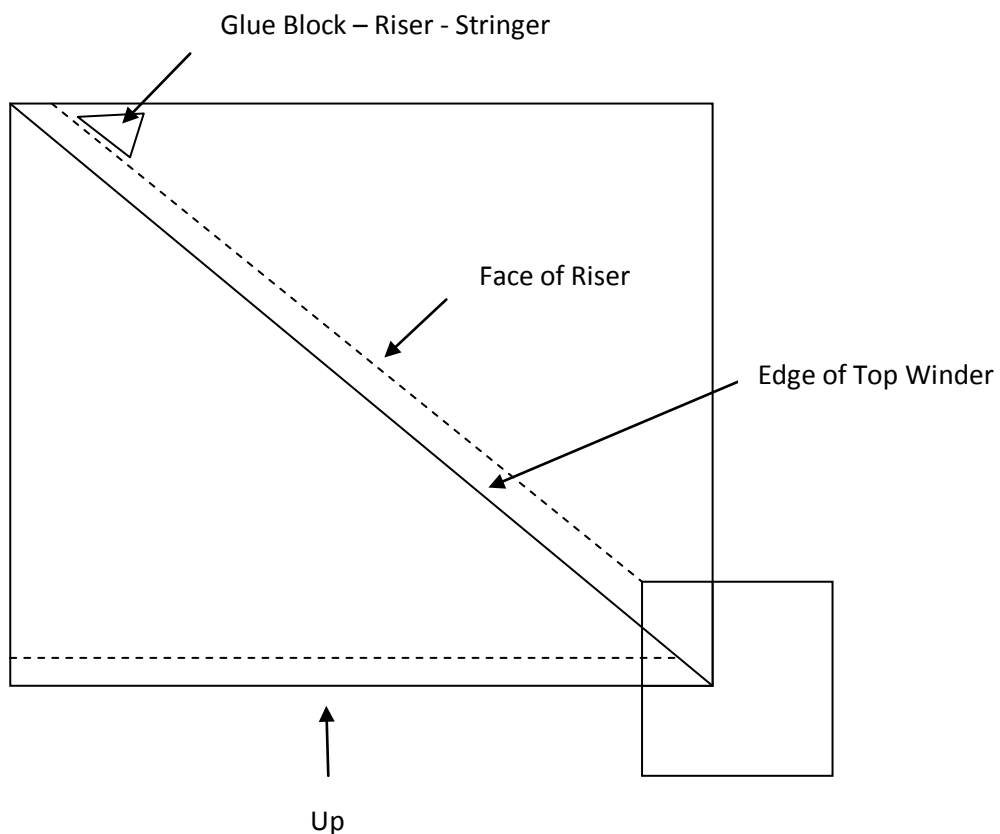




23 Morgan Street Cannington WA 6107
Phone: 08 9458 2646 Fax: 08 9356 2082
Contact: Shane Whiting 0412 132 139

Single Landing Set Up

- Allow a 15mm clearance off the wall for easier installation of landing boards. The gap will be covered by the 30 x 50 skirting supplied;
- Once the landing is in position mark the riser and biscuits. Remove the landing then cut and plane neatly; and
- Re-install and fix the landing so the riser will fit neatly into position.

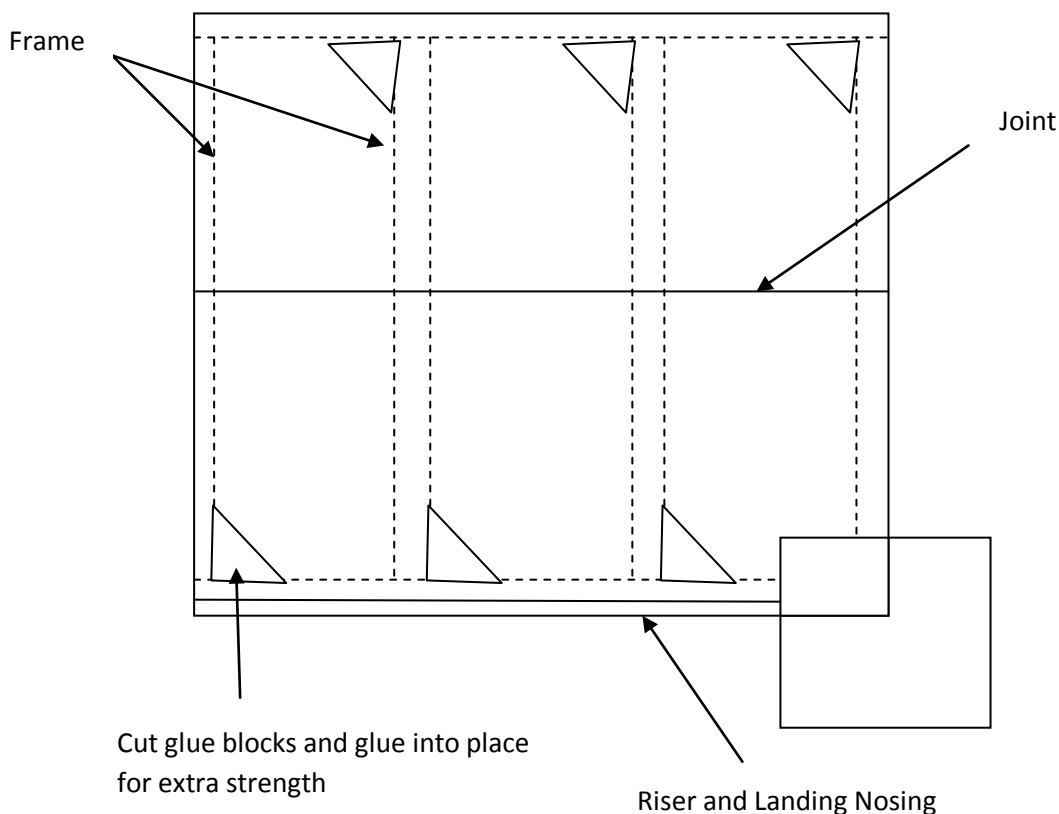


We recommend biscuit joining the landing joint and nosing to landing



23 Morgan Street Cannington WA 6107
Phone: 08 9458 2646 Fax: 08 9356 2082
Contact: Shane Whiting 0412 132 139

- Once all the landing is complete all that is remaining to be done is the skirting and beading to the top nosing / outstep;

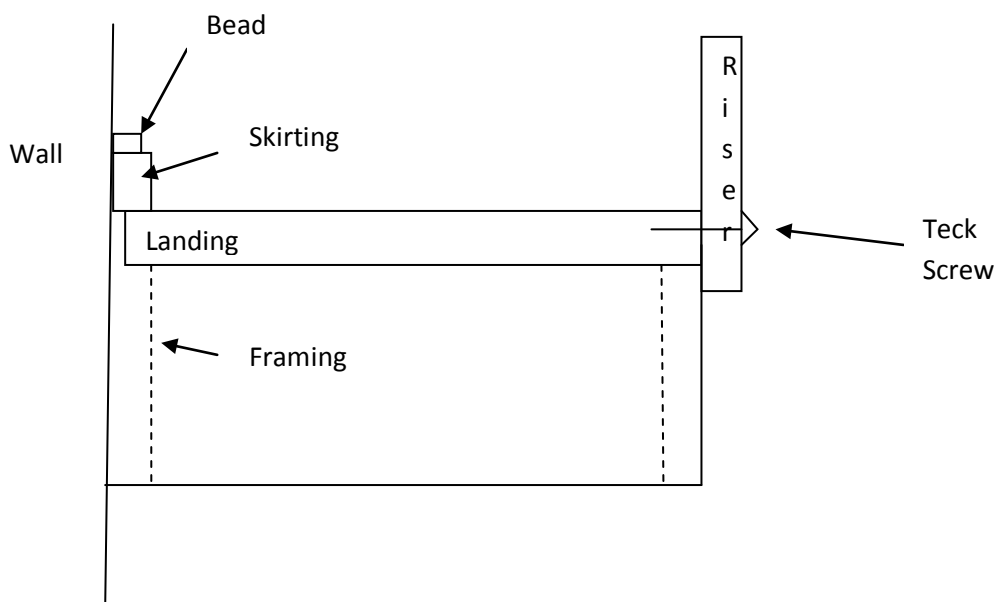

- Now the staircase is complete it is time to put the glue blocks into position, glue tread and riser faces and pin / nail into position.
- Allow at least 4-6 hours before using the staircase and if using PVA or liquid nails for the glue blocks allow at least 48 hours to prevent squeaking.