




23 Morgan Street Cannington WA 6107
 Phone: 08 9458 2646 Fax: 08 9356 2082
 Contact: Shane Whiting 0412 132 139

Staircase Installation Instructions

- Start from the top – down position with the top wall stringer placed on the ground;
- Put the top 2-3 treads and the bottom 2-3 treads in the stringer, one at a time ensuring you glue and wedge in with a hammer to make it easier when you pick up the staircase and place into position;
- Position the top riser allowing for the top outstep nosing, which is installed last of all;

Note: Stringer hook may need to be packed up to upper floor finish etc (tile, carpet and timber flooring)

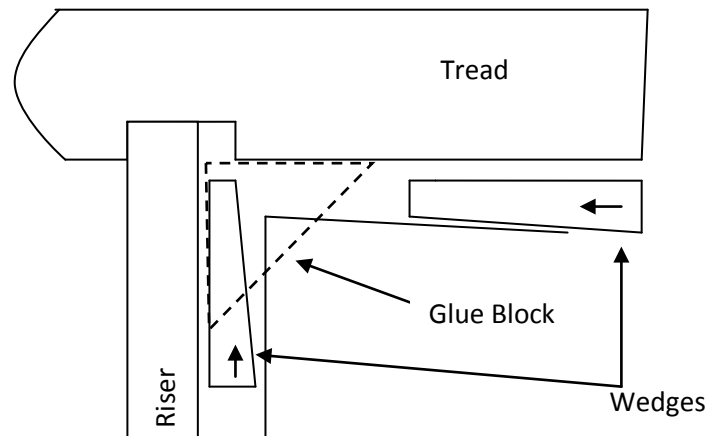


- Hit the riser up into tread then wedge and teck screw into back of tread. Ensure you have pre-drilled the riser first;
- Stand into position allowing for top floor finishing;
- Prop up so treads are all level, position central post – plumb and square to stringer;
- Assemble bottom flight (checking it fits – the right width) and place into position levelling; and
- Provided it all looks correct and is level – fix off to all walls (ensure sufficient fixing have been provided).



23 Morgan Street Cannington WA 6107
Phone: 08 9458 2646 Fax: 08 9356 2082
Contact: Shane Whiting 0412 132 139

Three Winder Set Up

- Start at the bottom winder and work up;
- Measure the width between the housing of the stringer to housing of the post, cut winder to suit.
- Mark front of riser on winder, cut and plane for a good join; and
- Wedge winder holding firmly in place, measure risers and cut and fix in as you go.

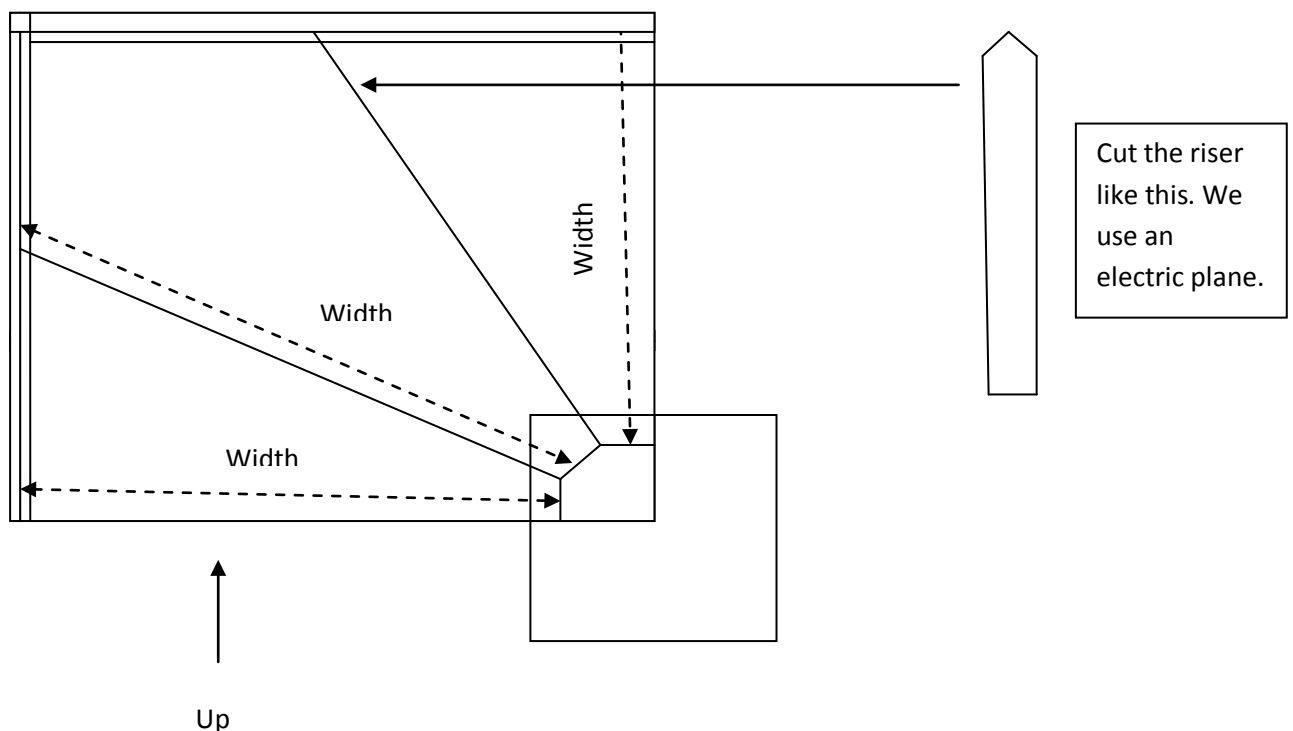




23 Morgan Street Cannington WA 6107
Phone: 08 9458 2646 Fax: 08 9356 2082
Contact: Shane Whiting 0412 132 139

Two Winder Set Up

- Once the winders are positioned (which can be difficult) mark the riser on the winder and cut or plane for a good butt join; and
- Complete both winders and all riser including landing and nosing. Hint: Start with the lower riser.

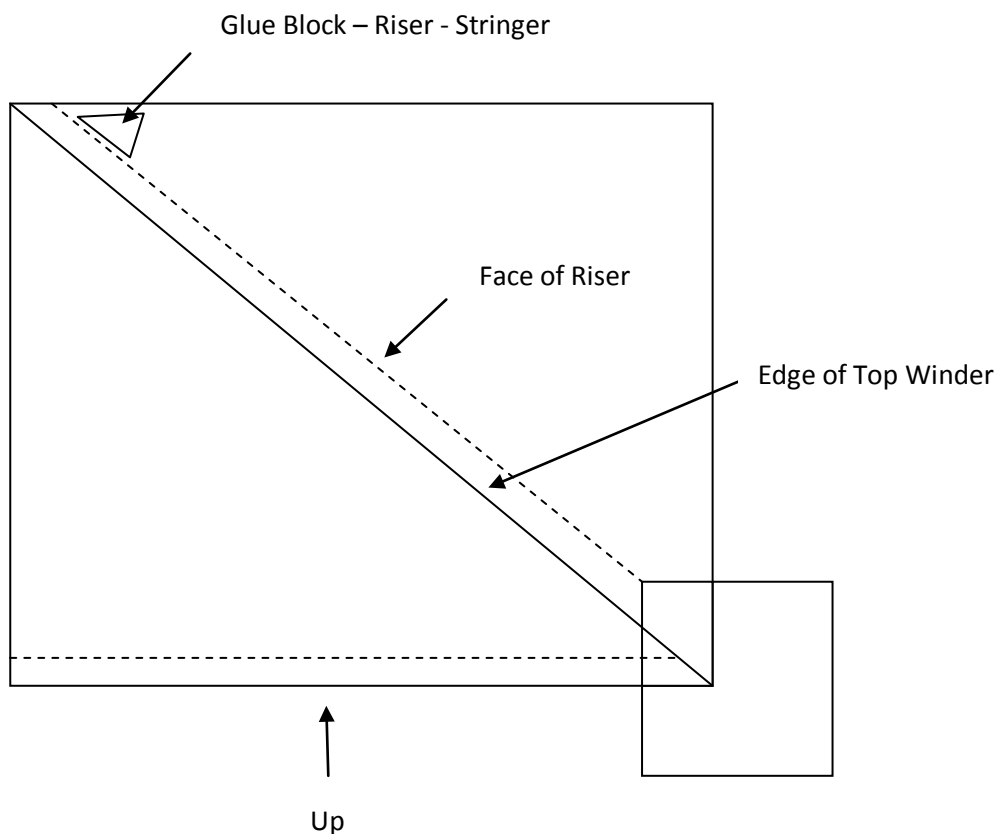




23 Morgan Street Cannington WA 6107
Phone: 08 9458 2646 Fax: 08 9356 2082
Contact: Shane Whiting 0412 132 139

Single Landing Set Up


- Allow a 15mm clearance off the wall for easier installation of landing boards. The gap will be covered by the 30 x 50 skirting supplied;
- Once the landing is in position mark the riser and biscuits. Remove the landing then cut and plane neatly; and
- Re-install and fix the landing so the riser will fit neatly into position.

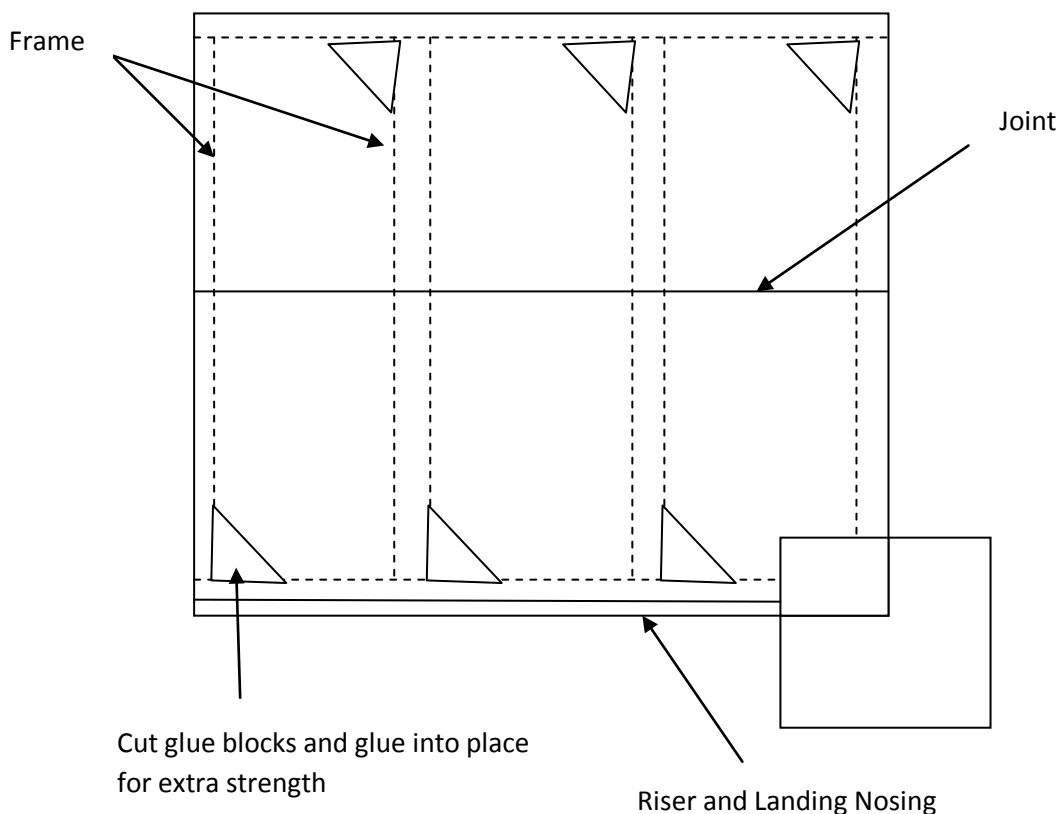



23 Morgan Street Cannington WA 6107
Phone: 08 9458 2646 Fax: 08 9356 2082
Contact: Shane Whiting 0412 132 139

- Once all the landing is complete all that is remaining to be done is the skirting and beading to the top nosing / outstep;

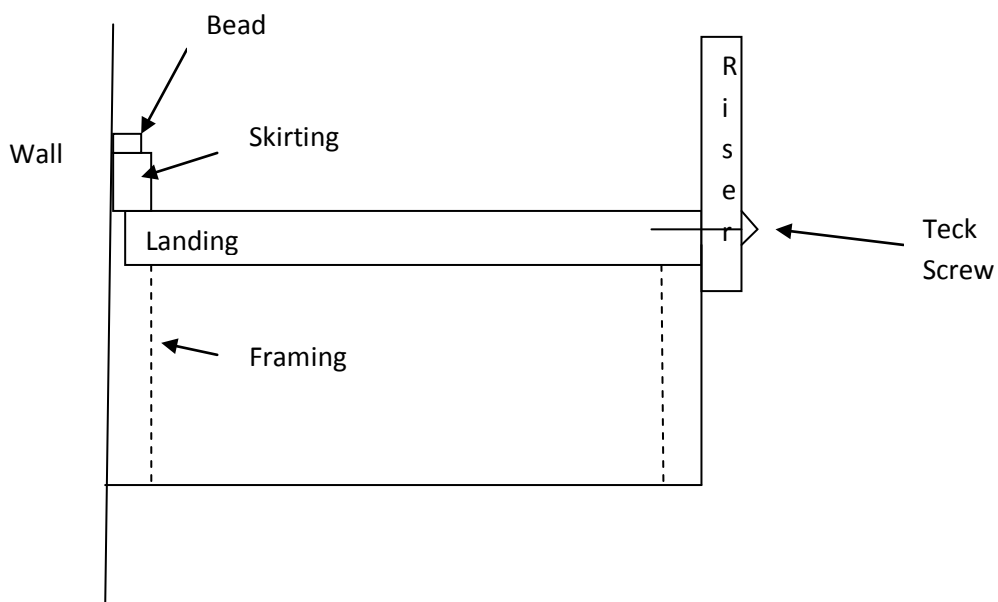

- Now the staircase is complete it is time to put the glue blocks into position, glue tread and riser faces and pin / nail into position.
- Allow at least 4-6 hours before using the staircase and if using PVA or liquid nails for the glue blocks allow at least 48 hours to prevent squeaking.